





# DOOR AJAR ALARM

In cab alarm sounds if ignition is activated when one or more doors are open. Can be wired with the handbrake to only sound when handbrake is disengaged.

### **Options:**

- No handbrake sensor
- With handbrake sensor

#### **Features & Benefits:**

- Sounds an alarm when a door is ajar while ignition is active
- Can also be wired to only be activated when handbrake is disengaged

#### **Details:**

 $\odot$  Compatibility Ute, Trailer

○ Warranty 12 Month

manufacturers warranty

**VIEW ONLINE** 





## **DOOR AJAR ALARM No handbrake sensor**



DOOR AJAR ALARM With handbrake sensor



Chat with one of our helpful Mobile Workspace Specialists.

- **→ 1300 350 625**
- → team.aus@hidrive.com.au
- → hidrive.com.au



Hidrive is the only manufacturer of service bodies for utes, trailers and trucks with a company-owned national installation network.



Eastern Manufacturing, Installation & Showroom 17 O'Sullivan Pl, Goulburn NSW 2580



Brisbane Showroom & Installation 146 Crockford St, Northgate QLD 4013



Melbourne Showroom & Installation 57 Hunter Rd, Derrimut VIC 3026



Western Manufacturing, Installation & Showroom 18 Catalano Rd, Canning Vale WA 6155



Sydney Showroom & Installation 10 Garner PI, Ingleburn NSW 2565











© Hidrive May 2024. All rights reserved. Errors & omissions excluded. Hidrive reserves the right to change specifications and models without notice.