




hidrive
MAKE CERTAIN

SERVICE BODY ACCESSORIES

Accessories to fit out your service body to get the job done right.

MADE
HERE, FOR
CERTAIN

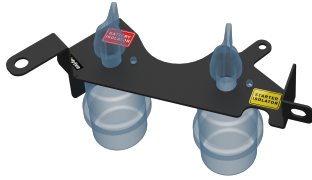

LOCKOUT ISOLATION JUMPSTART KIT

Red code for battery isolation.
Yellow code for starter isolation.
Heavy duty battery and starter isolation
lockout switch.

Features & Benefits:

- External safety mechanism to enable you to isolate battery or starter without going under the bonnet
- Can be located to suit your requirements, such as on the side or rear of the canopy or front of vehicle
- Kit includes bracket, isolator and jump start

Details:

✔ Compatibility	Ute, Trailer
✔ Warranty	1 Year

[VIEW ONLINE](#)





Chat with one of our helpful Mobile Workspace Specialists.

→ 1300 350 625

→ team.aus@hidrive.com.au

→ hidrive.com.au



MANUFACTURING, INSTALLATION & SHOWROOM

INSTALLATION & SHOWROOM

Hidrive is the only manufacturer of service bodies for utes, trailers and trucks with a company-owned national installation network.



Eastern Manufacturing, Installation & Showroom
17 O'Sullivan Pl, Goulburn NSW 2580



Brisbane Showroom & Installation
146 Crockford St, Northgate QLD 4013



Melbourne Showroom & Installation
57 Hunter Rd, Derrimut VIC 3026



Western Manufacturing, Installation & Showroom
18 Catalano Rd, Canning Vale WA 6155



Sydney Showroom & Installation
10 Garner Pl, Ingleburn NSW 2565



Adelaide Showroom & Installation
6 Wirriga St, Regency Park SA 5010