




**hidrive**  
MAKE CERTAIN

# ***SERVICE BODY ACCESSORIES***

Accessories to fitout your service body to  
get the job done right.

MADE  
HERE, FOR  
**CERTAIN**

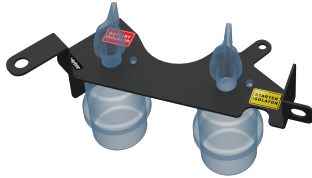

## ***LOCKOUT ISOLATION JUMPSTART KIT***

Red code for battery isolation.  
Yellow code for starter isolation.  
Heavy duty battery and starter isolation  
lockout switch.

### **Features & Benefits:**

- External safety mechanism to enable you to isolate battery or starter without going under the bonnet
- Can be located to suit your requirements, such as on the side or rear of the canopy or front of vehicle
- Kit includes bracket, isolator and jump start

### **Details:**

✓ Compatibility	Ute, Trailer
🛡️ Warranty	1 Year

**VIEW ONLINE**





Chat with one of our helpful Mobile  
Workspace Specialists.

→ **1300 350 625**

→ [team.aus@hidrive.com.au](mailto:team.aus@hidrive.com.au)

→ [hidrive.com.au](https://hidrive.com.au)



Hidrive is the only manufacturer of service bodies for  
utes, trailers and trucks with a company-owned national  
installation network.



**Eastern Manufacturing, Installation & Showroom**  
17 O'Sullivan Pl, Goulburn NSW 2580



**Brisbane Showroom & Installation**  
146 Crockford St, Northgate QLD 4013



**Melbourne Showroom & Installation**  
57 Hunter Rd, Derrimut VIC 3026



**Western Manufacturing, Installation & Showroom**  
18 Catalano Rd, Canning Vale WA 6155



**Sydney Showroom & Installation**  
10 Garner Pl, Ingleburn NSW 2565



**Adelaide Showroom & Installation**  
6 Worriga St, Regency Park SA 5010